

TECHNICAL FEATURES

Kyman-NET™ Vehicle Cradle	
Electrical Features	
Power Supply	from 10 to 32 VDC
Consumption (with mobile computer)	Max. 1.8 A
Quiescent Consumption (without mobile computer)	Max. 5 mA
Indicators	Power on LED (green)
Charge Time (when mobile computer is off)	Li-Ion Battery: max. 2.5 hours
Communication Features	
Interface	RS232
Baud Rate	up to 115200 b/sec
Environmental Features	
Working Temperature*	-20° to +50 °C / -4° to +140 °F
Storage Temperature	-20° to +70 °C / -4° to +158 °F
Humidity	90% non condensing
Degree of Protection	IP20
Vibration Resistance	EN60068-2-64 frequency range 5-1000 Hz; acceleration RMS: 3.1 g; initial slope: 26dB/oct 5-10 Hz; final slope: -3dB/oct 10-1000 Hz
Shock Resistance	EN60068-2-29 – ±25g, 6ms duration, 500 shock impacts per axis
Mechanical Features	
Dimensions	118.5 x 321 x 104 mm / 4.66 x 12.63 x 4.09 in
Weight	about 770 g / 27.16 oz

* Battery must be charged at a temperature ranging from 0° to +45 °C (+32° to +113 °F).

FCC COMPLIANCE

Modifications or changes to this equipment without the expressed written approval of Datalogic could void the authority to use this equipment.

The device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WEEE COMPLIANCE



Kyman-NET™ Vehicle Cradle

The Kyman-NET™ Vehicle Cradle allows charging the Kyman-NET™ mobile computer battery and holding it securely in your vehicle. It also functions as a serial communication interface between a Host (typically a Laptop PC) and the RS232 contacts on the mobile computer.

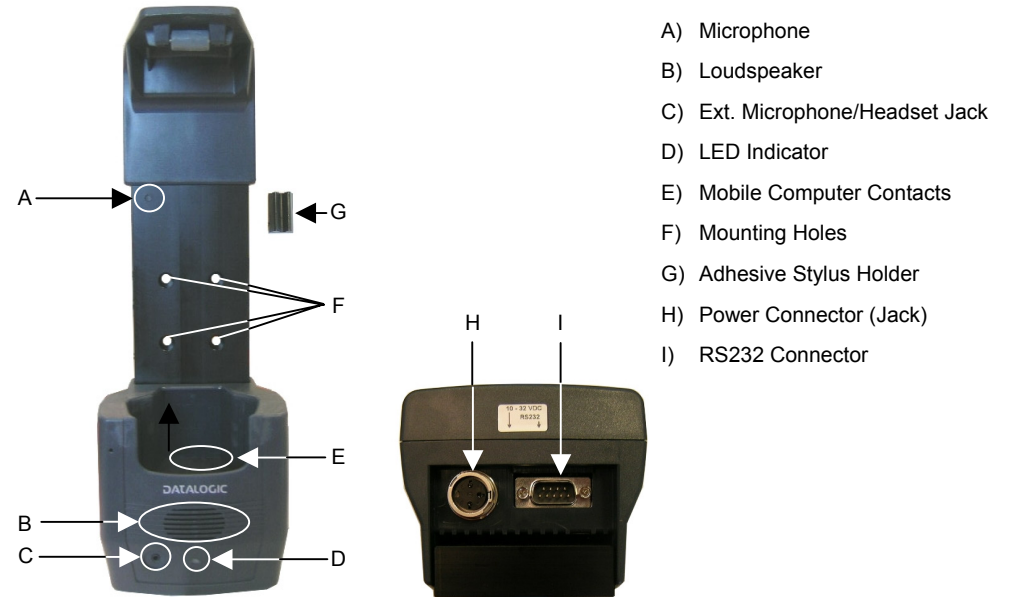


Figure 1 – Kyman-NET™ Vehicle Cradle

External microphone/headset jack, microphone and speaker allow managing a vocal communication (see related paragraph on next page).

MOUNTING THE KYMAN-NET™ VEHICLE CRADLE

The Kyman-NET™ Vehicle Cradle can be mounted to the desired surface using the 4 screws together with the 4 nuts.

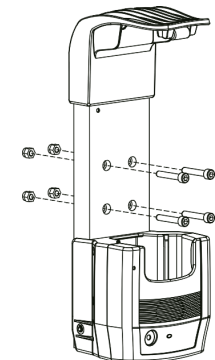


Figure 2 – Mounting the Kyman-NET™ Vehicle Cradle

POWERING THE KYMAN-NET™ VEHICLE CRADLE

Once the cradle has been mounted, it is necessary to prepare the power cable termination to connect the cradle to the vehicle power source.

- Brown wire: connect to a V+ (10 to 32 Vdc) vehicle power source;
- Blue wire: connect to the vehicle ground wire or chassis ground;
- Green/Yellow wire: not connected.

For connection to the vehicle power source it is possible to use the in-line fuse (with holder) supplied with the cradle.

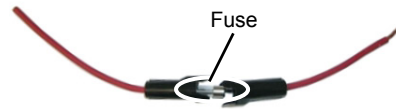


Figure 3 – Fuse Holder

Verify that the a 8 A slow-blow fuse is contained within the holder, then splice it to the end of the brown wire of the cable. Make the distance between fuse holder and power connection point as short as possible and apply a caution label on the fuse holder.



Figure 4 – Fuse Holder Connection

Once the power cable termination has been completed, it is possible to connect the Kyman-NET™ Vehicle Cradle to the vehicle power.

INSERTING THE KYMAN-NET™ INTO THE VEHICLE CRADLE

For correct functioning, first insert the mobile computer into the cradle. Then, push it towards the upper part of the cradle until the retaining roller clicks.

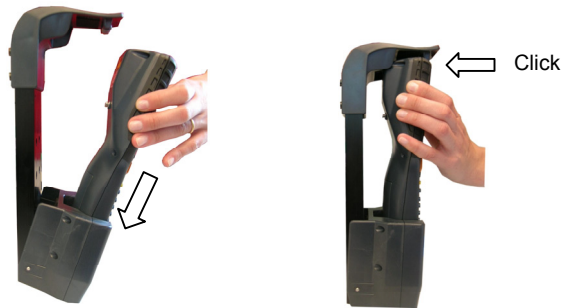


Figure 5 – Inserting the Mobile Computer into the Kyman-NET™ Vehicle Cradle

When the cradle is powered, insert the mobile computer and the green LED will turn on. If the mobile computer is not inserted, the LED remains off while the cradle is still powered.

EXTRACTING THE KYMAN-NET™ FROM THE VEHICLE CRADLE

To extract Kyman-NET™, push the clip of the retaining roller up and extract the mobile computer.

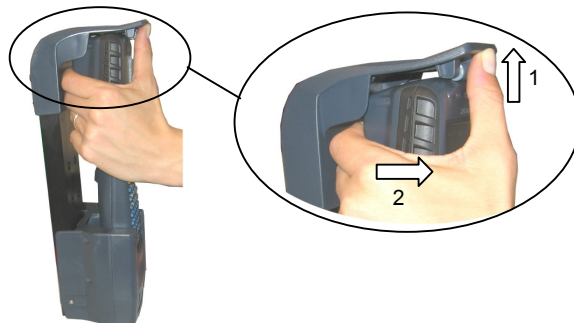


Figure 6 – Extracting the Mobile Computer from the Kyman-NET™ Vehicle Cradle

CONNECTION

The Kyman-NET™ Vehicle Cradle can be connected to a host by means of an RS232 interface.

RS232 Connection

The Kyman-NET™ Vehicle Cradle can be connected to the host by means of any standard null-modem cable. A 9-pin female D-Sub connector must be connected to the RS232 port of the cradle. Once the host has been turned on, insert the Kyman-NET™ mobile computer into the cradle.

Pin 9 of the Vehicle Cradle RS232 connector (normally not connected in null-modem cables), supplies regulated +5 Vdc \pm 5% 500 mA max power.



Figure 7 - RS232 Connection

CONFIGURING KYMAN-NET™ MOBILE COMPUTER FOR VOCAL COMMUNICATION

By default vocal communication takes place through the Kyman-NET™ Mobile Computer integrated loudspeaker and microphone. Once inserted into the vehicle cradle, the communication has to be managed by the cradle itself. Thus, the mobile computer must be configured through the volume settings applet available in the Windows CE .NET control panel to correctly manage the communication (refer to the Kyman-NET™ User's Manual for more details).



Vocal Communication requires Kyman-NET™ Mobile Computer SW version 1.34 or later.

NOTE

ACCESSORIES

- | | | |
|-----------|---------------------------------------|---|
| 94A051013 | WIN-NET VEHICLE POWER CAB (CRADLE) | Cable containing an 8A slow-blow fuse for powering the vehicle cradle from the car cigarette lighter. |
| 94ACC1306 | ADJUSTABLE ARM KIT FOR VEHICLE CRADLE | positionable arm for mounting the cradle in the vehicle. |