

CONTROLS

OUTPUT LED (S50-Mx...A00/B01/C01/C10/C21/E01/F01/T01) The yellow LED ON indicates that the NO output status is closed.

STABILITY LED (S50-Mx...B01/C01/C21/E01/F01) The green LED ON indicates that the received signal has a reserve greater than 30% compared to the output switching value. POWER ON LED (S50-Mx...G00)

The green LED indicates that the sensor is operating.

TRIMMER (S50-Mx...B01/C01/C21/E01/F01/T01)

The trimmer can be used to adjust sensitivity; the operating distance increases turning the trimmer clockwise.

WARNING: The trimmer rotation is limited to 270° by a mechanical stop. Do not apply excessive torque when adjusting (max 40 Nmm).

INSTALLATION

The sensor can be fixed by means of the M18x1 threaded body through a Ø 18mm hole, using the two CH.24 nuts enclosed (22Nm maximum tightening torque)

Wide range of accessories available: various orientable fixing brackets ease the sensor positioning (please refer to the accessories listed in the general catalogue).

The operating distance is measured from the front surface of the sensor lens

C/D models: To improve the detection, the object has to be moved closer or further away from the front surface of the sensor lens.

Radial version

In case of lateral translation, the object must move as indicated in the figure.


CONNECTIONS

The connections are compliant to the EN 60947-5-2 standard.


	S50-MxG00
BROWN 1 + 10	30 Vdc BROWN 1 + 10 30 Vdc
	UTPUT WHITE 2 TEST +
BLACK 4	UTPUT BLACK 4 TEST -
BLUE 3 OV	BLUE 3 OV

M12 CONNECTOR



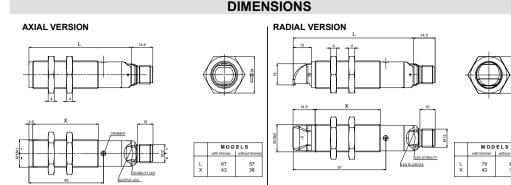

FIBRE OPTIC VERSION

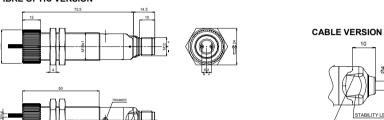

TECHNICAL DATA

	S50-MA AXIAL VERSION	S50-MR RADIAL VERSION
Power supply:	10 30 Vdc (limit values)	
Ripple:	2 Vpp max.	
Current consumption	35 mA	may
(output current excluded):	55 IIA	liidX.
Outputs:	NO and NC; PNP or NPN	(short-circuit protection)
Output current:	100 m/	A max.
Output saturation voltage:	2 V r	nax.
Response time:	0.5 ms (2 ms r	nod.F01/G00)
Switching frequency:	1KHz (250 Hz	mod.F01/G00)
Indicators:	OUTPUT LED (YELLOV	V) excluding mod.G00
	STABILITY LED (GREEN) (m	
	POWER ON LED (G	REEN) (mod.G00)
Setting:	sensitivity trimmer (mod.B0	01/C01/C21/E01/F01/T01)
Operating temperature:	-25 55 °C	
Storage temperature:	-25 70 °C	
Electrical shock protection:	Clas	ss 2
Operating distance (typical values):	A00: 0.14m on R2	
	B01: 0.13.5m on R2	B01: 0.12m on R2
	C01: 060cm	C01: 035cm
	C10: 010cm	C10: 08cm
	C21: 035cm	D00: 08cm
	D00: 0.510cm	F01/G00: 010m
	F01/G00: 015m	T01: 0.11m on R2
	E01: 30mm with OF-42 / 100mm with OF-43	
	T01: 0.11m on R2	
Emission type:	red (660 nm) (mod.B01/D00/E01/T01) / infra	ared (880nm) (mod.A00/C01/C10/C21/G00)
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (ca. 50 G) 3 shock per axis	
Housing material:	Nickel-plated brass (T	YPE 1 ENCLOSURE)
Lens material:	PMMA	
Mechanical protection:	IP67	
Connections:	2 m cable Ø 4 mm / M12 - 4 pole connector	
Weight:	110 g. max. cable vers. / 60 g. max. connector vers.	

SETTING

Setting of S50-Mx...A00

Position the sensor and reflector on opposite sides. Find the points where the vellow LED (OUT) is switched ON and OFF in both vertical and horizontal positions, and fix the sensor in the centre between these points.

Setting of S50-Mx...B01/T01

69 38

STABILITY LED

Position the sensor and reflector on opposite sides.

Turn the sensitivity trimmer to the maximum position. Moving the sensor both vertically and horizontally, determine the power on and off points of the vellow LED (OUT) and then mount the sensor in the middle of the points defined. Optimum operation is obtained when the green LED (mod.B01) is ON and the vellow LED is OFF. B01 models: If necessary reduce sensitivity in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity. T01 model: Turn the sensitivity trimmer counterclockwise until the vellow LED turns ON (pos.A).

Turn slowly the trimmer again clockwise until the yellow LED turns OFF (Operating condition, pos.B).

Setting of S50-Mx...F01/G00/E01 with OF-43 (P/R fibre-optics) Position the sensors (fibre terminals) on opposite sides.

Turn the sensitivity trimmer to maximum: moving the sensor both vertically and horizontally, determine the power on and off points of the vellow LED (OUT) and then mount the sensor in the middle of the points defined. Optimum operation is obtained when the green LED is ON and the vellow LED is OFF (the output function and the relative LEDs are inverted in the E01 model with the OF-43 fibre).

If necessary, reduce sensitivity using the trimmer, in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

Setting of S50-Mx...C01/C21/E01 with OF-42 (proximity fibre)

Turn the sensitivity trimmer to minimum: the green LED is ON, the yellow LED is OFF. Position the target to detect in front of the sensor or of the fibre terminals. Turn the sensitivity trimmer clockwise until the yellow LED turns ON (Target detected state, pos.A). Remove the target, the yellow LED turns OFF. Turn the sensitivity trimmer clockwise until the vellow LED turns ON (Background detected state, pos.B). The trimmer reaches maximum if the background is not detected. Turn the trimmer to the intermediate position C, between the two positions A and B. The green LED must be ON.

Setting of S50-Mx...C10/D00

The operating distance range of these sensors is factory preset: please consider this feature when positioning.

TEST FUNCTION (S50-Mx...G00)

The TEST+ and TEST- inputs can be used to inhibit the emitter and verify that the system is correctly operating. The receiver output should switch when the test is activated while the

beam is uninterrupted. The inputs activating voltage range is 10 ... 30 Vdc.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265 40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324 http://www.datasensor.com e-mail: info@datasensor.com

DATASENSOR S.p.A. cares for the environment: 100%

- ÷ recycled paper.
 - DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001321 Rev.A



CONTROLS

OUTPUT LED (S50-Px...A00/B01/C01/C10/C21/E01/F01/T01) The yellow LED ON indicates that the NO output status is closed.

STABILITY LED (S50-Px...B01/C01/C21/E01/F01) The green LED ON indicates that the received signal has a reserve greater than 30% compared to the output switching value. POWER ON LED (\$50-Px...G00)

The green LED indicates that the sensor is operating.

TRIMMER (S50-Px...B01/C01/C21/E01/F01/T01)

The trimmer can be used to adjust sensitivity; the operating distance increases turning the trimmer clockwise.

WARNING: The trimmer rotation is limited to 270° by a mechanical stop. Do not apply excessive torque when adjusting (max 40 Nmm).

INSTALLATION

The sensor can be fixed by means of the M18x1 threaded body through a Ø 18mm hole, using the specific washer and the two CH.24 nuts enclosed (1.5Nm maximum tightening torque).

Alternatively, the sensor can be mounted through the two housing's holes using two screws (M3x22 or longer) and washer.

Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs and the easiest access to the trimmer.

^r Radial vers.


Wide range of accessories available: 22mm nuts, h=8mm, (2Nm maximum tightening torque) guarantee an improved torque and various orientable fixing brackets ease the sensor


positioning (please refer to the accessories listed in the general catalogue). The operating distance is measured from the front surface of the sensor lens. C/D models: To improve the detection, the object has to be moved closer or further away

from the front surface of the sensor lens. In case of lateral translation, the object must move as indicated in the figure.


CONNECTIONS


The connections are compliant to the EN 60947-5-2 standard.

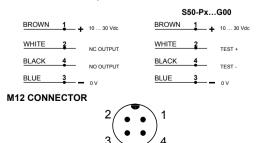

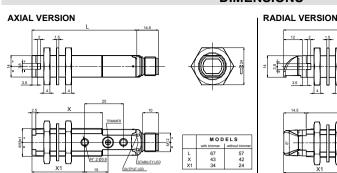

FIBRE OPTIC VERSION





	S50-PA AXIAL VERSION	S50-PR RADIAL VERSION
Power supply:	10 30 Vdc (limit values)	
Ripple:	2 Vpr	o max.
Current consumption	25 m	1 mov
(output current excluded):	35 mA max.	
Outputs:	NO and NC; PNP or NP	(short-circuit protection)
Output current:	100 m	A max.
Output saturation voltage:	2 V	max.
Response time:	0.5 ms (2 ms	mod.F01/G00)
Switching frequency:	1KHz (250 Hz	mod.F01/G00)
Indicators:	OUTPUT LED (YELLO	
	STABILITY LED (GREEN) (r	
	POWER ON LED (C	
Setting:	sensitivity trimmer (mod.B	01/C01/C21/E01/F01/T01)
Operating temperature:		55 °C
Storage temperature:	-25	70 °C
Electrical shock protection:		ss 2
Operating distance (typical values):	A00: 0.14m on R2	
	B01: 0.13.5m on R2	B01: 0.12m on R2
	C01: 060cm	C01: 035cm
	C10: 010cm	C10: 08cm
	C21: 035cm	D00: 08cm
	D00: 0.510cm	F01/G00: 010m
	F01/G00: 015m	T01: 0.11m on R2
	E01: 30mm with OF-42 / 100mm with OF-43	
	T01: 0.11m on R2	
Emission type:	red (660 nm) (mod.B01/D00/E01/T01) / infrared (880nm) (mod.A00/C01/C10/C21/G00)	
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (ca. 50 G) 3 shock per axis	
Housing material:	PBT (TYPE 1 ENCLOSURE)	
Lens material:	PMMA	
Mechanical protection:	IP67	
Connections:	2 m cable Ø 4 mm / M12 - 4 pole connector	
Weight:	75 g. max. cable vers. / 25 g. max. connector vers.	

DIMENSIONS

MODELS Ð - (1) 79 43 46 69 42 36



the vellow LED is OFF (the output function and the relative LEDs are inverted in the E01 model with the OF-43 fibre). If necessary, reduce sensitivity using the trimmer, in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

> Setting of S50-Px...C01/C21/E01 with OF-42 (proximity fibre) Turn the sensitivity trimmer to minimum: the green LED is ON, the

vellow LED is OFF. Position the target to detect in front of the sensor or of the fibre terminals. Turn the sensitivity trimmer clockwise until the yellow LED turns ON (Target detected state, pos.A). Remove the target, the yellow LED turns OFF.

Turn the sensitivity trimmer clockwise until the vellow LED turns ON (Background detected state, pos.B).

The trimmer reaches maximum if the background is not detected.

Turn the trimmer to the intermediate position C, between the two positions A and B. The green LED must be ON.

Setting of S50-Px...C10/D00

The operating distance range of these sensors is factory preset: please consider this feature when positioning.

TEST FUNCTION (S50-Px...G00)

The TEST+ and TEST- inputs can be used to inhibit the emitter and verify that the system is correctly operating.

The receiver output should switch when the test is activated while the beam is uninterrupted.

The inputs activating voltage range is 10 ... 30 Vdc.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE. 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date. This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265 40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324 http://www.datasensor.com e-mail: info@datasensor.com

- ÷ DATASENSOR S.p.A. cares for the environment: 100% recycled paper.
 - DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001241 Rev.A

SETTING

Setting of S50-Px...A00

Position the sensor and reflector on opposite sides. Find the points where the vellow LED (OUT) is switched ON and OFF in both vertical and horizontal positions, and fix the sensor in the centre between these points.

Setting of S50-Px...B01/T01

Position the sensor and reflector on opposite sides.

vellow LED turns OFF (Operating condition, pos.B).

Position the sensors (fibre terminals) on opposite sides.

Turn the sensitivity trimmer to the maximum position. Moving the sensor both vertically and horizontally, determine the power on and off points of the vellow LED (OUT) and then mount the sensor in the middle of the points defined. Optimum operation is obtained when the green LED (mod.B01) is ON and the vellow LED is OFF.

T01 model: Turn the sensitivity trimmer counterclockwise until the vellow LED turns ON (pos.A). Turn slowly the trimmer again clockwise until the

Turn the sensitivity trimmer to maximum: moving the sensor both

vertically and horizontally, determine the power on and off points of the

vellow LED (OUT) and then mount the sensor in the middle of the points

defined. Optimum operation is obtained when the green LED is ON and

B01 models: If necessary reduce sensitivity in order to detect very small targets. In order to improve alignment. repeat the procedure detailed above whilst progressively reducing the sensitivity.

Setting of S50-Px...F01/G00/E01 with OF-43 (P/R fibre-optics)





TECHNICAL DATA



S50-PL/ML SERIES





CONTROLS

OUTPUT LED (S50-PL/ML...B01/C01/F01/) The vellow LED ON indicates that the NO output status is closed.

POWER ON LED

The green LED indicates that the sensor is operating.

TRIMMER (S50-PL/ML...B01/C01/F01)

The trimmer can be used to adjust sensitivity; the operating distance increases turning the trimmer clockwise.

WARNING: The trimmer rotation is limited to 270° by a mechanical stop. Do not apply excessive torque when adjusting (max 40 Nmm).

INSTALLATION

S50-PL: The sensor can be fixed by means of the M18x1 threaded body through a Ø 18mm hole, using the specific washer and the two CH.24 nuts enclosed (1.5Nm maximum tightening torque).

Alternatively, the sensor can be mounted through the two housing's holes using two screws (M3x22 or longer) and washer.

Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs and the easiest access to the trimmer.

22mm nuts, h=8mm, (2Nm maximum tightening torque) are available to guarantee an improved torgue

S50-ML: The sensor can be fixed by means of the M18x1 threaded body through a \varnothing 18mm hole, using the specific washer and the two CH.24 nuts enclosed (22Nm maximum tightening torque).


For both plastic version and metallic version are available various orientable fixing brackets to ease the sensor positioning (please refer to the accessories listed in the general catalogue). The operating distance is measured from the front surface of the sensor lens.

In case of lateral translation, the object must move as indicated in the figure

S50-PL	/MLB01/C01/F01	S50-PL/MLG00
BROWN	1 1 1 1 1 1 1 1 1 1	BROWN 1 10 30
WHITE	2 NC OUTPUT	WHITE 2 TEST +
BLACK	4 NO OUTPUT	BLACK 4
BLUE	3 – 0V	BLUE 3

The connections are compliant to the EN 60947-5-2 standard.

DIMENSIONS

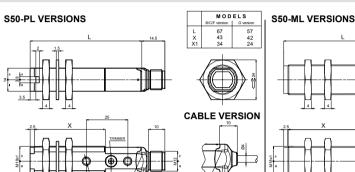

TECHNICAL DATA

POWER ON LED

	S50-PL PLASTIC VERSIONS	S50-ML METALLIC VERSIONS
Power supply:	10 30 Vdc (limit values)	
Ripple:	2 Vpp	
Current consumption		od.B01/C01/F01)
(output current excluded):		(mod.G00)
Outputs:		(short-circuit protection)
Output current:		A max.
Output saturation voltage:	2 V	max.
Response time:	333	βμs
Switching frequency:		KHz
Indicators:	OUTPUT LED (YELLOV	
	POWER ON L	ED (GREEN)
Setting:	sensitivity trimmer	(mod.B01/C01/F01)
Operating mode:		RK mode on NC output (mod.C01)
		mode on NC output (mod.B01/F01)
Operating temperature:	-10 50 °C	
Storage temperature:	-25 70 °C	
Electrical shock protection:	Class 2	
Operating distance (typical	B01: 0.116m on R2	
values):	C01: 035cm	
	F01/G00: 060m	
Emission type:	RED LASER: Class 1 EN 60825-1 (mod.B01/C01/G00)	
	Class II CDRH 21 CFR PART 1040.10 (mod.B01/C01/G00)	
	Max. power \leq 1mW; Pulse = 4.5uS; λ = 630680nm; Frequency =25kHz	
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (ca. 50 G) 3 shock per axis	
Housing material:	PBT (TYPE 1 ENCLOSURE) Nickel plated brass	
Lens material:		MA
Mechanical protection:	IP	67
Connections:	2 m cable Ø 4 mm / M	112 - 4 pole connector
Weight:	75g. max. cable vers./25g. max. connector vers. 110g. max. cable vers./60g. max. connector vers.	

CONNECTIONS

1 ____ 10 ... 30 Vdc

NOT USED

M12 CONNECTOR



MODELS

57

38

67

43

CABLE VERSION

POWER ON LE

POWER ON LED

Setting of S50-PL/ML...B01 Position the sensor and reflector on opposite sides.

Turn the sensitivity trimmer to the maximum position. Moving the sensor both vertically and horizontally, determine the power ON and OFF points of the OUTPUT LED and then mount the sensor in the middle of the points defined.

SETTING

If necessary reduce sensitivity in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

Setting of S50-PL/ML...F01/G00

Position the sensors on opposite sides.

Turn the sensitivity trimmer to maximum; moving the sensor both vertically and horizontally, determine the power ON and OFF points of the OUTPUT LED and then mount the sensor in the middle of the points defined

If necessary, reduce sensitivity using the trimmer, in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

Setting of S50-PL/ML...C01

Turn the sensitivity trimmer to minimum: the OUTPUT LED is OFF. Position the target to detect in front of the sensor.



Turn the sensitivity trimmer clockwise until the OUTPUT LED turns ON (Target detected state, pos.A). Remove the target, the OUTPUT LED turns OFF.

Turn the sensitivity trimmer clockwise until the OUTPUT LED turns ON (Background detected state, pos.B).

The trimmer reaches maximum if the background is not detected.

Turn the trimmer to the intermediate position C, between the two positions A and B.

TEST FUNCTION (S50-PL/ML...G00)

The TEST input can be used to inhibit the emitter and verify that the system is correctly operating.

The receiver output should switch when the test is activated while the beam is uninterrupted.

The input activating voltage range is 10...30 Vdc.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265

40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324 http://www.datasensor.com e-mail: info@datasensor.com

À DATASENSOR S.p.A. cares for the environment: 100% recycled paper.

DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001341 Rev.B





S50-PA/MA...M

Background suppression proximity

📷 S50-PA/MA...N

Foreground-background suppression proximity

INSTRUCTION MANUAL

CONTROLS

OUTPUT LED

The yellow LED ON indicates that the NO output status is closed.

READY/ERROR LED (bicolour)

When the bicoloured LED is continuously green, the sensor is operating in a normal condition and it is ready to function correctly (stability condition).

The red and green blinking of the LED indicates a wrong sensor setting. Please refer to the "SETTING" paragraph to get the correct setting procedure.

SET PUSHBUTTON

A long pressure on the pushbutton activates the self-setting procedure.

INSTALLATION

S50-PA...M/N: The sensor can be fixed by means of the M18x1 threaded body through a \oslash 18mm hole, using the specific washer and the two CH.24 nuts enclosed (1.5Nm maximum tightening torque). Alternatively, the sensor can be mounted through the two housing's holes using two screws (M3x22 or longer) and washer.

Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs and the easiest access to the SET pushbutton.

22mm nuts, h=8mm, (2Nm maximum tightening torque) are available to guarantee an improved torque.

S50-MA...M/N: The sensor can be fixed by means of the M18x1 threaded body through a \oslash 18mm hole, using the specific washer and the two CH.24 nuts enclosed (22Nm maximum tightening torque).

For both plastic version and metallic version are available various orientable fixing brackets to ease the sensor positioning (please refer to the accessories listed in the general catalogue). The operating distance is measured from the front surface of the sensor lens. To improve the detection, the object has to



be moved closer or further away from the front surface of the sensor lens. In case of lateral translation, the object must move as indicated in the figure. CONNECTIONS

M12 CONNECTOR

10 ... 30 Vdc

NO OUTPUT

(BROWN

(BLACK)


NC OUTPUT

(WHITE)


0 V .

(BLUE)

The connections are compliant to the EN 60947-5-2 standard.



DIMENSIONS

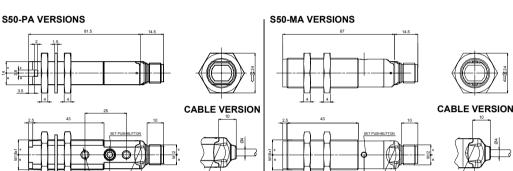

STABILITY LED

TECHNICAL DATA

	S50-PA PLASTIC VERSIONS	S50-MA METALLIC VERSIONS
Dewer europhy		
Power supply:	10 30 Vdc	· /
Ripple:	2 Vpp	max.
Current consumption	30 mA max	
(output current excluded):		
Outputs:	NA and NC; PNP or NPN	
Output current:	100 mA	A max.
Output saturation voltage:	2 V n	
Response time:	1 ms mod.M /	
Switching frequency:	500 Hz mod.M /	250 Hz mod.N
Indicators:	OUTPUT LED (YELLOW) / REAI	DY/ERROR LED (GREEN/RED)
Setting:	SET pus	
Operating mode:	LIGHT mode on NO output /	DARK mode on NC output
Data retention:	non volatile EEF	PROM memory
Operating temperature:	-25 55 °C	
Storage temperature:	-25 70 °C	
Electrical shock protection:	Class 2	
Operating distance (typical	background suppression 50100 mm (mod.M)	
values):	foreground suppression 40100 mm and background suppression 45110mm mod.N)	
Emission type:	RED (630 nm)	
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (ca. 50 G) 3 shock per axis	
Housing material:	PBT (TYPE 1 ENCLOSURE) Nickel plated brass	
Lens material:	РММА	
Mechanical protection:	IP67	
Connections:	2 m cable Ø 4 mm / M	12 - 4 pole connector
Weight:	75g. max. cable vers./25g. max. connector vers.	110g. max. cable vers./60g. max. connector vers.

SETTING

EASY TOUCH™

The sensor uses the patent-covered EASY TOUCH™ technology that allows a rapid and safe self-setting of the product. Two different setting nossibilities are available:

 EASY TOUCHTM; a long pressure of the SET pushbutton allows selfsetting.

FINE DETECTION; to be used only in particularly critical conditions; this setting procedure is used only when the EASY TOUCH is not sufficient.

Setting of S50-PA/MA...M

To achieve a correct sensor setting, the background or the object to be suppressied has to be present during self-setting.

- EASY TOUCHTM (standard detection)

Place the background or the object to be suppressed inside the operating range.

Press the SET pushbutton until the READY/ERROR LED turns OFF. Release the SET pushbutton and wait for the READY/ERROR LED to turn green.

The sensor is now ready to detect all objects in the set range distinguishing them from the suppressed background (output LED turns ON).

- Fine detection

Place the background or the object to be suppressed inside the operating range.

Press the SET pushbutton. The READY/ERROR LED turns OFF.

Keep the SET pushbutton pressed until the READY/ERROR LED blinks green.

The sensor performs a fine adjustment and is ready to detect objects also very near the suppressed background (output LED turns ON).

Setting of S50-PA/MA...N

To achieve a correct sensor setting, the object to be detected has to be used during self-setting.

EASY TOUCHTM (standard detection)

Place the object to be detected in front of the sensor inside the operating range.

Press the SET pushbutton until the READY/ERROR LED turns OFF. Release the SET pushbutton and wait for the READY/ERROR LED to turn green.

The sensor is ready to detect the object (output LED turns ON) excluding the background and foreground range (and thus any object closer to the sensor respect to the reading field).

Fine detection

Place the object to be detected inside the operating range.

Press the SET pushbutton. The READY/ERROR LED turns OFF. Keep the SET pushbutton pressed until the READY/ERROR LED blinks green

The sensor performs a fine adjustment and is ready to detect with better precision objects (output LED turns ON) at the pre-set operating distance, suppressing the background and foreground, even if the latter is very close to the sensing range.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265 40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324

http://www.datasensor.com e-mail: info@datasensor.com

DATASENSOR S.p.A. cares for the environment: 100% recycled paper.

DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001012 Rev.B



S50-PH/MH SERIES



CONTROLS

OUTPUT LED (S50-PH/MH...B01/C01/F01/)

The yellow LED ON indicates that the NO output status is closed. POWER ON LED

The green LED indicates that the sensor is operating.

TRIMMER (S50-PH/MH...B01/C01/F01)

The trimmer can be used to adjust sensitivity; the operating distance increases turning the trimmer clockwise.

WARNING: The trimmer rotation is limited to 270° by a mechanical stop. Do not apply excessive torque when adjusting (max 40 Nmm).

INSTALLATION

S50-PH: The sensor can be fixed by means of the M18x1 threaded body through a \emptyset 18mm hole, using the specific washer and the two CH.24 nuts enclosed (1.5Nm maximum tightening torque).

Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs and the easiest access to the trimmer.

22mm nuts, h=8mm, (2Nm maximum tightening torque) are available to guarantee an improved torque.


S50-MH: The sensor can be fixed by means of the M18x1 threaded body through a \varnothing 18mm hole, using the specific washer and the two CH.24 nuts enclosed (22Nm maximum tightening torque).

Various orientable fixing brackets for both plastic and metallic versions are available to ease sensor positioning (please refer to the accessories listed in the general catalogue).


The operating distance is measured from the front surface of the sensor lens.

CONNECTIONS

The connections are compliant to the EN 60947-5-2 standard.



DIMENSIONS

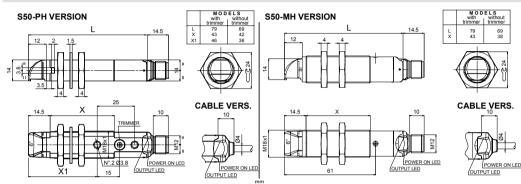

TECHNICAL DATA

	S50-PH PLASTIC VERSIONS	S50-MH METAL VERSIONS
Power supply:	10 30 Vdc limit values	
Ripple:	2 Vpp max.	
Current consumption	35 mA max. (B0	1/C01/F01 mod.)
(output current excluded):	30mA max	
Outputs:	NO and NC; PNP or NPN	(short-circuit protection)
Output current:	100 m	A max.
Output saturation voltage:	2 V I	max.
Response time:	333	βμs
Switching frequency:	1.5	KHz
Indicators:	OUTPUT LED (YELLOV	V) (B01/C01/F01 mod.)
	POWER ON L	ED (GREEN)
Setting:	sensitivity trimmer (
Operating mode:		K mode on NC output (C01 mod.)
	DARK mode on NO output / LIGHT	
Operating temperature:	-10 50 °C	
Storage temperature:	-25 70 °C	
Electrical shock protection:	Class 2	
Operating distance (typical values):	B01: 0.19m on R2 reflector	
	C01: 025cm	
	F01/G00: 050m	
Emission type:	RED LASER: Class 1 EN 60825-1 (B01/C01/G00 mod.)	
	Class II CDRH 21 CFR PART 1040.10 (B01/C01/G00 mod.)	
	Max. power \leq 1mW; Pulse = 4.5us; λ = 630680nm; Frequency =25kHz	
Ambient light rejection:	According to EN 60947-5-2	
Vibrations:	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (approx. 50 G) 3 shock per axis	
Housing material:	PBT (TYPE 1 ENCLOSURE) Nickel-plated brass	
Lens material:	PMMA	
Mechanical protection:	IP67	
Connections:	2 m cable Ø 4 mm / N	112 - 4 pole connector
Weight:	75g. max. cable vers. /25g. max. conn. vers.	110g. max. cable vers. /60g. max. conn. vers.

M12 CONNECTOR



Setting of S50-PH/MH...B01

Position the sensor and reflector on opposite sides. Turn the sensitivity trimmer to the maximum position. Moving the sensor both vertically and horizontally, determine the power ON and OFF points of the OUTPUT LED and then mount the sensor in the middle of the points defined.

If necessary reduce sensitivity in order to detect very small targets. In order to improve alignment, repeat the given procedure whilst progressively reducing the sensitivity.

Setting of S50-PH/MH...F01/G00

Position the sensor and reflector on opposite sides.

Turn the sensitivity trimmer to maximum: moving the sensor both vertically and horizontally, determine the power ON and OFF points of the OUTPUT LED and then mount the sensor in the middle of the points defined.

If necessary, reduce sensitivity using the trimmer, in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

Setting of S50-PH/MH...C01

Turn the sensitivity trimmer to minimum: the OUTPUT LED is OFF. Position the target to detect in front of the sensor.

Turn the sensitivity trimmer clockwise until the MIN > CM OUTPUT LED turns ON (*Target detected state, pos.A*). Remove the target, the OUTPUT LED turns OFF.

Turn the sensitivity trimmer clockwise until the OUTPUT LED turns ON (Background detected state, pos.B).

The trimmer reaches maximum if the background is not detected. Turn the trimmer to the intermediate position C, between the two positions A and B.

TEST FUNCTION (S50-PH/MH...G00)

The TEST+ input can be used to deactivate the emitter and verify that the system is operating correctly.

The receiver output should switch when the test is activated while the beam is uninterrupted.

The input activating voltage range is 10...30 Vdc.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265 40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324 http://www.datasensor.com e-mail: info@datasensor.com

DATASENSOR S.p.A. cares for the environment: 100%

recycled paper. DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001680 Rev.00





S50-PA/MA...U I uminescence sensor

INSTRUCTION MANUAL

CONTROLS

OUTPUT I FD


The vellow LED ON indicates that the NO output status is closed. READY/ERROR LED (bicolour)

When the bicoloured LED is continuously green, the sensor is operating in a normal condition and it is ready to function correctly (stability condition).

The red and green blinking of the LED indicates a wrong sensor setting. Please refer to the "SETTING" paragraph to get the correct setting procedure.

SET PUSHBUTTON

A long pressure on the pushbutton activates the self-setting procedure.

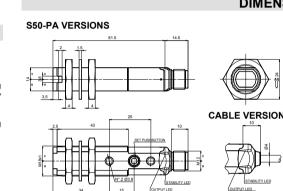

BROWN

WHITE

BLACK


BLUE

CONNECTIONS The connections are compliant to the EN 60947-5-2 standard.


10 ... 30 Vdc

NC OUTPUT

NO OUTPUT



DIMENSIONS

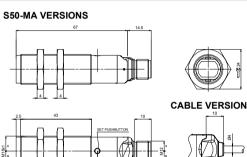

STABILITY LEF

TECHNICAL DATA

	S50-PA PLASTIC VERSIONS	S50-MA METALLIC VERSIONS	
Power supply:	10 30 Vdc	10 30 Vdc (limit values)	
Ripple:	2 Vpp	max.	
Current consumption (output current excluded):	25 mA	A max.	
Outputs:	NA and NC; PNP or NPN	I (short-circuit protection)	
Output current:	100 m	A max.	
Output saturation voltage:	2 V I	max.	
Response time:	500) μs	
Switching frequency:	1 K	ίHz	
Indicators:	OUTPUT LED (YELLOW) / REA	DY/ERROR LED (GREEN/RED)	
Setting:	SET pus	shbutton	
Operating mode:	LIGHT mode on NO output	/ DARK mode on NC output	
Data retention:	non volatile EE	non volatile EEPROM memory	
Operating temperature:	-10 55 °C		
Storage temperature:	-20 70 °C		
Electrical shock protection:	Class 2		
Operating distance (typical values):	820mm range, maximum signal at 10 mm		
Minimum spot dimension:	3mm		
Emission type:	LED UV (370 nm)		
Ambient light rejection:	according to EN 60947-5-2		
Vibrations:	1.5 mm amplitude, 10 55 Hz freq	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (ca. 50 G) 3 shock per axis		
Housing material:	PBT (TYPE 1 ENCLOSURE) Nickel plated brass		
Lens material:	PM	PMMA	
Mechanical protection:	IP	IP67	
Connections:	2 m cable Ø 4 mm / N	2 m cable Ø 4 mm / M12 - 4 pole connector	
Weight:	75g. max. cable vers./25g. max. connector vers.	110g. max. cable vers./60g. max. connector vers.	

SETTING

The supplied sensor is set at the maximum sensitivity, allowing the detection of the minimum luminescence intensity. No other setting procedure is necessary, unless luminescent objects placed on luminescence backgrounds have to be detected.

FASY TOUCH™

The sensor uses the patent-covered EASY TOUCH™ technology that allows a rapid and safe self-setting of the product. Two different setting possibilities are available:

- EASY TOUCHTM: a long pressure of the SET pushbutton allows selfsettina
- FINE DETECTION: to be used only in particularly critical conditions. this setting procedure is used only when the EASY TOUCH™ is not sufficient.

Setting of S50-PA/MA....U

To achieve a correct sensor functioning, the luminescence mark or object to be detected has to be placed at the right reading distance.

EASY TOUCH™ (standard detection in the LIGHT mode)

The EASY TOUCH™ technology allows the functioning in the LIGHT mode (mark presents a higher luminescence respect to the background).

The mark to detect has to be placed correctly at the right reading distance within the sensor spot.

Press the SET pushbutton until the READY/ERROR LED turns OFF. Release the SET pushbutton and wait for the READY/ERROR LED to turn areen

The sensor is now ready to detect the pre-set luminescent mark or object (output LED turns ON when the NO output is closed).

Note: The automatic EASY TOUCH™ setting has to be performed without any objects inside the sensor reading range (or using a nonluminescent object) in order to bring the sensor back to the maximum sensitivity condition.

Fine detection (DARK or LIGHT mode)

This mode offers an improved detection precision and also allows the detection of luminescent marks or objects placed on luminescent backgrounds.

The operating mode is selected automatically by the sensor: DARK operating mode (mark presents a lower luminescence respect to the background) or LIGHT operating mode (mark presents a higher luminescence respect to the background).

The mark to detect has to be placed correctly at the right reading distance within the sensor spot.

Press the SET pushbutton. The READY/ERROR LED turns OFF Keep the SET pushbutton pressed until the READY/ERROR LED blinks green. Place the background under the sensor spot.

Press the SET pushbutton again until the READY/ERROR LED turns OFF. The sensor is now ready to detect, with a very high precision. the pre-set luminescent mark (output LED turns ON, READY/ERROR LED turns green).

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265

40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324 http://www.datasensor.com e-mail: info@datasensor.com

- B DATASENSOR S.p.A. cares for the environment: 100% recycled paper.
 - DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001031 Rev.B

INSTALLATION

S50-PA...U: The sensor can be fixed by means of the M18x1 threaded body through a Ø 18mm hole, using the specific washer and the enclosed 24mm nuts (maximum torque of tightening 1.5Nm). Alternatively, the sensor can be mounted through the two housing's

holes using two screws (M3x22 or longer) and nuts. Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs and the easiest access to the SET pushbutton.


22mm nuts, h=8mm, (2Nm maximum tightening torque) are available to guarantee an improved torgue.

S50-MA...U: The sensor can be fixed by means of the M18x1 threaded body through a \varnothing 18mm hole, using the specific washer and the two CH.24 nuts enclosed (22Nm maximum tightening torque).

For both plastic version and metallic version are available various orientable fixing brackets to ease the sensor positioning (please refer to the accessories listed in the general catalogue).

The operating distance is measured from the front surface of the sensor lens

To detect luminescent marks on reflective surfaces, position the sensor axis at 10° 15° respect to the orthogonal line of the surface to detect




4	1015°	1015°
r		/
ı	<u>د (آ)</u>	m.





CONNECTIONS

The connections are compliant to the EN 60947-5-2 standard.



NC OUTPUT 10 ... 30 Vdc (WHITE) (BROWN) NO OUTPUT 0 V -(BLACK) (BLUE)

M12 CONNECTOR

settina. FINE DETECTION; to be used only in particularly critical conditions, this setting procedure is used only when the EASY TOUCH™ is not sufficient.

Setting of S50-PA/MA...W

FASY TOUCH™

To achieve a correct sensor functioning, the coloured mark or object to be detected has to be placed at the right reading distance.

SETTING

The sensor uses the patent-covered EASY TOUCH™ technology that

- EASY TOUCH TAK a long pressure of the SET pushbutton allows self-

EASY TOUCH™ (standard detection in the DARK mode)

allows a rapid and safe self-setting of the product.

Two different setting possibilities are available:

The EASY TOUCH[™] technology allows the functioning in the DARK mode (mark presents a lower light intensity respect to the background)

The mark to detect has to be placed correctly at the right reading distance within the sensor spot.

Press the SET pushbutton until the READY/ERROR LED turns OFF. Release the SET pushbutton and wait for the READY/ERROR LED to turn areen

The sensor is now ready to detect the pre-set coloured mark or object (output LED turns ON when the NO output is closed).

Fine detection (DARK or LIGHT mode)

This mode offers an improved detection precision. The sensor can function either in the DARK operating or in the LIGHT operating mode (light-coloured mark ON dark background). The operating mode is selected automatically by the sensor.

The mark to detect has to be placed correctly at the right reading distance within the sensor spot.

Press the SET pushbutton. The READY/ERROR LED turns OFF. Keep the SET pushbutton pressed until the READY/ERROR LED blinks green. Place the background under the sensor spot.

Press the SET pushbutton again until the READY/ERROR LED turns OFF.

The sensor is now ready to detect, with a very high precision, the preset coloured mark (output LED turns ON, READY/ERROR LED turns areen)

The output LED is ON and the NO output is closed, when the sensor is positioned on the pre-set coloured mark.

NOTE

If a setting error will occur please repeat again the EASY TOUCH setting procedure, in order to be sure to restart the setting procedure correctly.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date.

This warranty does not cover damage or liability deriving from the improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265 40050 Monte S. Pietro - Bologna - Italy Tel: +39 051 6765611 Fax: +39 051 6759324

http://www.datasensor.com e-mail: info@datasensor.com

- ÷ DATASENSOR S.p.A. cares for the environment: 100% recycled paper. DATASENSOR S.p.A. reserves the right to make modifications
 - and improvements without prior notification.

826001041 Rev.B

S50-PA/MA...W

Contrast sensor

CONTROLS

OUTPUT I FD

The vellow LED on indicates that the NO output status is closed. READY/ERROR LED (bicolour)

When the bicoloured LED is continuously green, the sensor is operating in a normal condition and it is ready to function correctly (stability condition).

The red and green blinking of the LED indicates a wrong sensor setting. Please refer to the "SETTING" paragraph to get the correct setting procedure.

SET PUSHBUTTON

A long pressure on the pushbutton activates the self-setting procedure.

INSTALLATION


S50-PA...W: The sensor can be fixed by means of the M18x1 threaded body through a \varnothing 18mm hole, using the specific washer and the enclosed 24mm nuts (maximum torque of tightening 1.5Nm). Alternatively, the sensor can be mounted through the two housing's holes using two screws (M3x22 or longer) and nuts. Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling Leeds and the easiest access to the SET pushbutton.

22mm nuts, h=8mm, (2Nm maximum tightening torque) are available to guarantee an improved torque.

S50-MA...W: The sensor can be fixed by means of the M18x1 threaded body through a \varnothing 18mm hole, using the specific washer and the two CH.24 nuts enclosed (22Nm maximum tightening torgue).


For both plastic version and metallic version are available various orientable fixing brackets to ease the sensor positioning (please refer to the accessories listed in the general catalogue).

The operating distance is measured from the front surface of the sensor lens

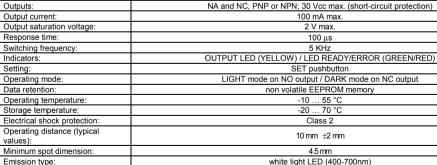

Storage temperature.	-20 70 °C	
Electrical shock protection:	Class 2	
Operating distance (typical values):	10 mm ±2 mm	
Minimum spot dimension:	4.5 mm	
Emission type:	white light LED (400-700nm)	
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	1.5 mm amplitude, 10 55 Hz frequency, 2 hours for each X, Y, Z axis	
Shock resistance:	500 ms (ca. 50 G) 3 shock per axis	
Housing:	PBT (TYPE 1 ENCLOSURE)	Nickel plated brass
Lenses:	PMMA	
Mechanical protection:	IP67	
Connections:	2 m cable Ø 4 mm / M12 - 4 pole connector	

10 ..




Power supply:

Weight:

Current consumption

(output current excluded):

Ripple:

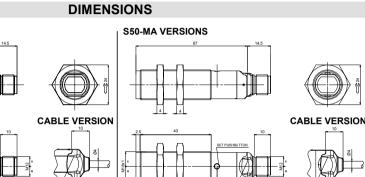

TECHNICAL DATA

STABILITY LED

S50-PA PLASTIC VERSIONS

30 Vdc (limit values)

2 Vpp max.

25 mA max.

75g. max. cable vers./25g. max. connector vers. 110g. max. cable vers./60g. max. connector vers.

S50-MA METALLIC VERSIONS

INSTRUCTION MANUAL

STABILITY LEI




S50-PA/MA...Y

Distance sensor


CONNECTIONS

DIMENSIONS

The connections are compliant to the EN 60947-5-2 standard.



M12 CONNECTOR




SETTING


No sensor setting is necessary.

The user has to select the direct or inverse proportionality of the output respect to the object's distance inside the operating field. This is obtained by means of the DIR/INV input.

The direct proportionality is set connecting the DIR/INV input to +Vdc;

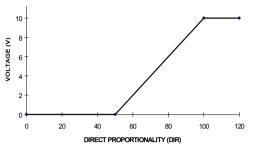

the inverse proportionality is set connecting the DIR/INV input to 0V.

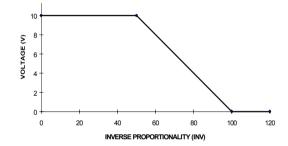

CONTROLS

INSTRUCTION MANUAL

OUTPUT LED

The vellow LED indicates the analogue output status, changing its emission intensity

FIELD LED

The red LED on indicates that the object to detect is outside the sensor operating field.

INSTALLATION

S50-PA...Y: The sensor can be fixed by means of the M18x1 threaded body through a Ø 18mm hole, using the specific washer and the enclosed 24mm nuts (maximum torque of tightening 1.5Nm). Alternatively, the sensor can be mounted through the two housing's holes using two screws (M3x22 or longer) and nuts. Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs.


22mm nuts, h=8mm, (2Nm maximum tightening torque) are available to guarantee an improved torque.

S50-MA...Y: The sensor can be fixed by means of the M18x1 threaded body through a \varnothing 18mm hole, using the specific washer and the two CH.24 nuts enclosed (22Nm maximum tightening torque).

For both plastic version and metallic version are available various orientable fixing brackets to ease the sensor positioning (please refer to the accessories listed in the general catalogue).

The operating distance is measured from the front surface of the sensor lens

In case of lateral translation, the object must move as indicated in the figure.

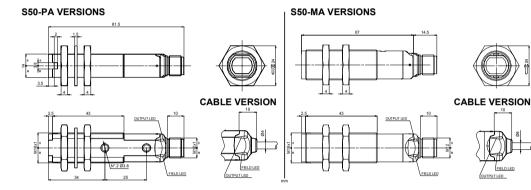

TECHNICAL DATA

	S50-PA PLASTIC VERSIONS	S50-MA METALLIC VERSIONS
Power supply:	18 30 Vdc (limit values)	
Ripple:	2 Vpp	o max.
Current consumption (output current excluded):	30 mA max.	
Analogue output:	010V i	n tension
Response time:	3,33	3 ms
Switching frequency:	150) Hz
Indicators:	OUTPUT LED (YELLO	W) / FILED LED (RED)
Data retention:	non volatile EE	PROM memory
Operating temperature:	-10 55 °C	
Storage temperature:	-20 70 °C	
Electrical shock protection:	Class 2	
Operating distance (typical values):	50100mm	
Emission type:	RED (630nm)	
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	10 55 Hz, 1.5 mm amplitude in each X, Y, Z axis for 2 hours	
Shock resistance:	500 ms (approx. 50 G) 3 shock in each 3 axis	
Selection:	direct or inverse proportionality of the output respect to the object distance	
Housing:	PBT (TYPE 1 ENCLOSURE) Nickel plated brass	
Lenses:	РММА	
Mechanical protection:	IP	67
Connections:	2 m cable Ø 4 mm / M12 - 4 pole connector	
Weight:	75g. max. cable vers./25g. max. connector vers.	110g. max. cable vers./60g. max. connector vers.

DECLARATION OF CONFORMITY

We DATASENSOR S.p.A. declare under our sole responsibility that these products are conform to the 89/336 CEE, 73/23 CEE Directives and successive amendments.

WARRANTY

FIELD LED

DATASENSOR S.p.A. warrants its products to be free from defects. DATASENSOR S.p.A. will repair or replace, free of charge, any product found to be defective during the warranty period of 36 months from the manufacturing date. This warranty does not cover damage or liability deriving from the

improper application of DATASENSOR products.

DATASENSOR S.p.A. Via Lavino 265

40050 Monte S. Pietro - Bologna - Italy

Tel: +39 051 6765611 Fax: +39 051 6759324

http://www.datasensor.com e-mail: info@datasensor.com

÷ DATASENSOR S.p.A. cares for the environment: 100% recycled paper.

DATASENSOR S.p.A. reserves the right to make modifications and improvements without prior notification.

826001021 Rev.A